



3211

Angle Grinder 2350W

| Number | Name |
|--------|--------------------|
| 1 | Outer Flange |
| 2 | Inner Flange |
| 3 | Protect Guard |
| 4 | Screw M5×16 |
| 5 | Front Cover |
| 6 | Anti-dust Cover |
| 7 | Spindle |
| 8 | Key 4×Φ13 |
| 9 | Bearing 6202 |
| 10 | 6202 Bearing Cover |
| 11 | Screw 4×12 |
| 12 | Wheel Gear |
| 13 | Circlip 14 |
| 14 | Needle bearing |
| 15 | Side Handle |
| 16 | Screw M5×40 |
| 17 | Spindle Lock |
| 18 | Spring |
| 19 | Circlip 6 |
| 20 | Bumper |
| 21 | Gear Box |
| 22 | Fixing Screw M8 |
| 23 | Pinion Gear |
| 24 | Bearing 6201 |
| 25 | 6201 Bearing Cover |
| 26 | Screw M4×12 |
| 27 | Rotor Assy |
| 28 | Anti-dust Ring |
| 29 | Bearing 608 |
| 30 | Bearing Sleeve |
| 31 | Wind Guard |
| 32 | Screw ST5×70 |

| Number | Name |
|--------|-------------------------|
| 33 | Stator Assy |
| 34 | Housing |
| 35 | Screw 4.2×14 |
| 36 | Brush Cover |
| 37 | Carbon Brush |
| 38 | Screw ST4×12-F |
| 39 | Screw M4×10 |
| 40 | Brush Holder |
| 41 | Electric Ring |
| 42 | Screw ST4.2×10 |
| 43 | Right Rear Handle |
| 44 | Left Rear Handle |
| 45 | Switch |
| 46 | Capacitor |
| 47 | Revolving Button Spring |
| 48 | Revolving Button |
| 49 | Screw ST4×14 |
| 50 | Cable Clamp |
| 51 | Cable Protector |
| 52 | Cable and Plug |
| 53 | Inner hexagon wrench |
| 54 | Spanner |