 


Ronix[®]

Premium Quality

ELECTRIC LAWN MOWER

4400

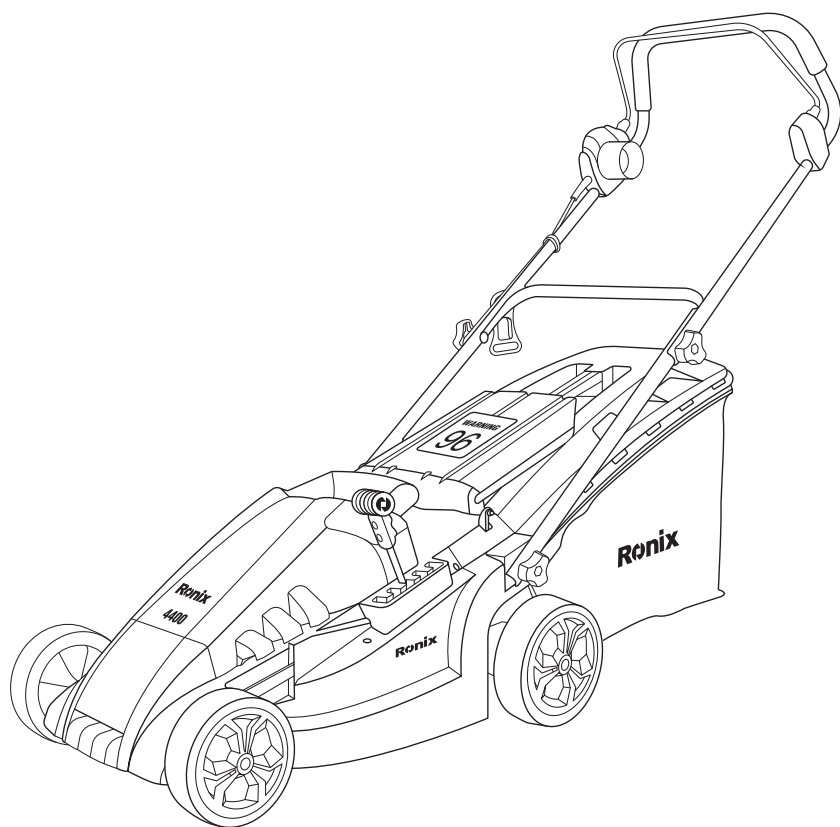


www.ronixtools.com

TECHNICAL SPECIFICATION

Model	4400
Power	1600W
Voltage	220-240V
Frequency	50Hz
Product dimension	127×48×99CM(Length×width×height)
Body Material	pp
Blade dimension	380mm
Blade material	45# Steel
Length of cable	VDE bulb in PLUG
Cutting width	380mm
Number of positions	5 Height position 20-65mm
Dust bag size	50L
Weight	18Kg
Include	Front wheel 2pcs Back wheel 2pcs Front Wheel cover 2pcs Back Wheel cover 2pcs Lower handle 1pc Grass bag 1pc Cable clamp 2pcs Lower Knob 2pcs Upper Knob 2pcs Cable Hook 1pc M8 Nut 4pcs ø10 Flat Washer 4pcs Sleeve tool for screw 1pc Wrench for blade 1pc Hexagon nut 4pcs

 PART LIST

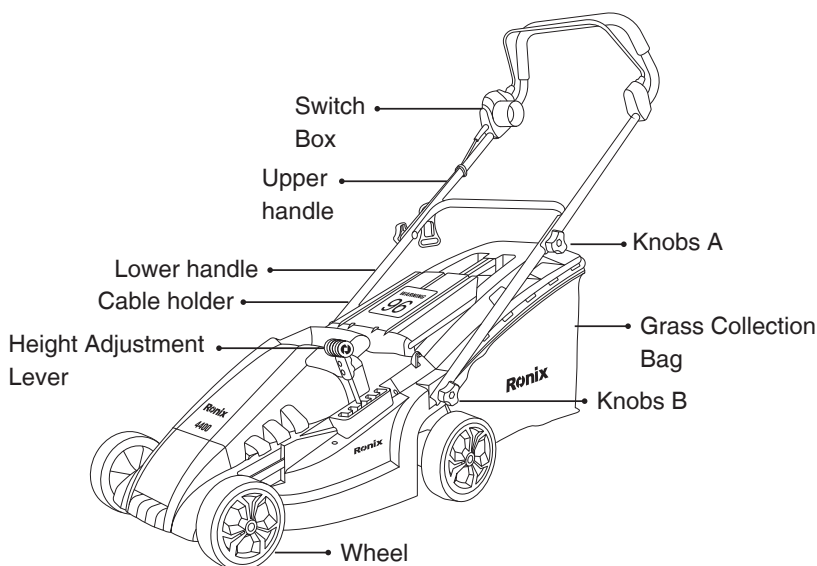

NOISE DATA

Declared guaranteed sound power level: 93dB (A)

The sound intensity level for operator may exceed 85dB(A) and ear protection measures are necessary.

SAFETY INSTRUCTIONS

GENERAL SAFETY INSTRUCTIONS

WARNING!

Read all instructions failure to follow all instructions listed below may result in electric shock, fire and /or serious injury. The term “power tool” in all of the warnings listed below refers to your mains operated (corded) power tools or battery operated (cordless) power tool.

■ WORK AREA

- Keep the work area clean and well lit. Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks, which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control

ELECTRICAL SAFETY

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil and sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

■ PERSONAL SAFETY

- Stay alert. Watch what you are doing and use common sense when operating a power tool. Do not operate tool when you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Avoid accidental starting. Ensure the switch is in the off position

before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.

- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

- Dress properly. Do not wear loose clothing or jewelry; Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.

■ POWER TOOL USE AND CARE

- Do not force the tool. Use the correct power tool for your application, the correct power tools will do the job better and safer at the rate for which it was designed.

- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

- Maintain power tools, check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could result in a hazardous situation.

■SERVICE

- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

■ADDITIONAL SAFETY RULES FOR LAWN MOWER

Read the instructions carefully Be familiar with the controls and the proper use of the appliance.

Never allow children to use the appliance.

Never allow people unfamiliar with these instructions to use the appliance. Local regulations may restrict the age of the operator.

Never operate the appliance with people, especially children, or pets are nearby.

The operator or user is responsible for accidents or hazards occurring to other people or their property.

While operating the appliance, always wear substantial footwear and long trousers. Do not operate the appliance when barefoot or wearing open sandals.

Thoroughly inspect the area where the appliance is to be used and remove all stones, sticks, wires, bones, and other foreign objects.

Before using, always visually inspect to see that the rotating parts and cutter assembly are not worn or damaged. Replace worn or damaged parts in sets to preserve balance.

Operate the appliance only in daylight or in good artificial light. Avoid operating the appliance in wet grass, where feasible. Always be sure of your footing on slopes. Walk, never run. Always work across the face of slopes, never up and down. Exercise extreme caution when reversing or

pulling the appliance towards to you.

Do not operate the appliance on excessively steep slopes.

Stop the rotating parts if appliance has to be tilted for transportation. Do not operate the cutting means when crossing surfaces other than grass, and when transporting the appliance to and from the working area.

Never operate the appliance with defective guards or shields, or without safety devices, for example deflectors and/or catchers in place.

Switch on the motor according to instructions and with feet well away from rotating parts.

Do not tilt appliance when switching on the motor, except if the appliance has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part, which is away from the operator. Always ensure that both hands are in the operating position before returning the appliance to the ground. Do not put hands or feet near or under rotating parts.

Never pick up or carry an appliance while the motor is running.

Pull the plug from the socket:













- Whenever you leave the machine.
- Before clearing a blockage.
- After striking a foreign object. Inspect the appliance for damage and make repairs as necessary.
- If the appliance starts to vibrate abnormally, check immediately.



■SYMBOLS

The rating plate on your tool may show symbols. These represent important information about the product or instructions on its use

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.




Denotes risk of personal injury, loss of life, or damage to the tool in case of non-observance	
Use eye protection Use ear protection	
Conforms to all regulatory standards in the country in the EU where the products is purchased	
Wear sturdy, non-slip footwear	
Read the user manual	
Use protective gloves	
Do not expose to rain	
Keep children at a distance of no less than 10m from the work area	
Debris may be ejected from the discharge chute	
The tines will continue to rotate for a short while after the rake has been switched off. Do not pick up or carry the rake until the tines has stopped rotating	
This product is double insulated electrically	
Disconnect from mains power immediately if the power cord becomes damaged	


Beware of sharp blades. Blades continue to rotate after the motor is switched off Remove plug from mains before maintenance or if cord is damaged	
Keep supply flexible cord away from cutting means	

V-ASSEMBLY INSTRUCTIONS

■ PREPARATION (SEE FIG 1):

  - Put the cable hook on upper handle. (fig.1a)
- Connect upper and lower handles with supplied screws and knobs A.(fig.1b)
- Put the washer over the axles, and fit wheels like picture shows, secure in place with the nut and press the wheel covers into place. (fig.1c)
- Insert the lower handles into the mower body and fix it with the knobs B(fig.1d)
- Fix the cable holders. (fig.1e)
- Grass collection bag assembly. Fix the fabric bag with upper plastic cover together. (fig.1f)
- Lift the flap and place the grass bag over the lugs. (fig.1g)

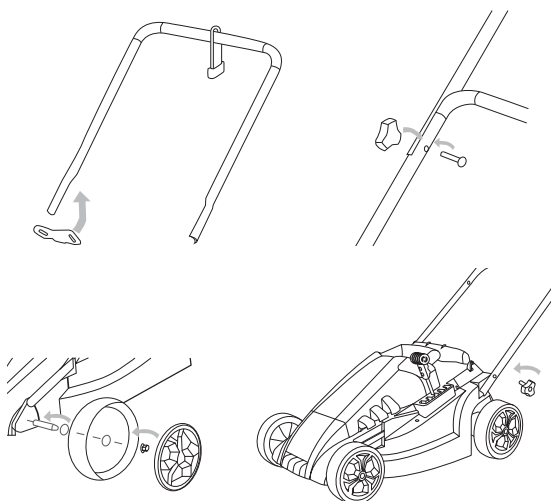

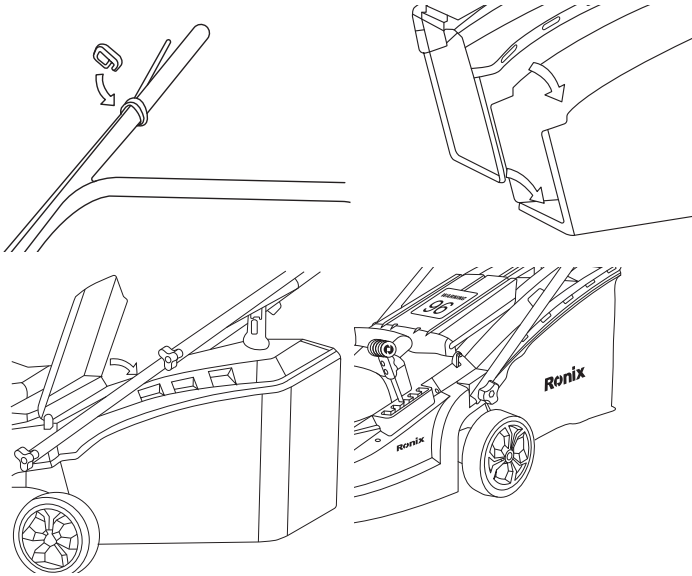


CUTTING HEIGHT ADJUSTMENT (PIC.2)

NOTE: To obtain the desired cutting height, the front and rear axles are repositioned on the underside of the mower housing.

⚠ WARNING! Disconnect the mower from the power supply and ensure the blade has stopped coasting before adjusting the height.

 - To raise the blade height, grasp the height adjustment lever and move it toward the back of mower.
- To lower the blade height, grasp the height adjustment lever and move it toward the front of mower.

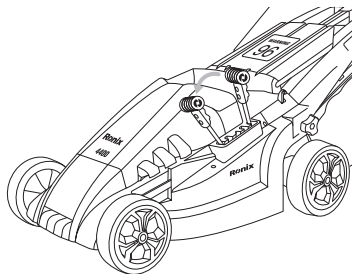

VI-OPERATING

 
■CONNECT TO POWER SUPPLY

⚠ WARNING! Before connecting to the mains supply, always check the switch is in off position. Connect the plug into the RCD protected power supply.

■STARTING

⚠ CAUTION!

Do not start the mower if it is standing in long grass. Press the safety button (A) of the switch assembly and then pull the switch lever (B) against the bar. Keep the switch lever held whilst releasing the safety button. To stop the mower, release the switch lever and it automatically returns to its off position.

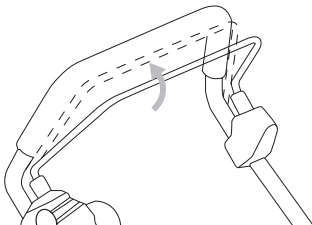

■MOWING(FIG.4)

 
We recommend to use your mower as outlined in this section in order to achieve optimum results and to reduce the risk of cutting the mains cable.

- Place the bulk of the mains cable on the close to the starting point.
- Switch the mower on as described above.
- Proceed as shown in fig.4
- Move from position 1 to position 2
- Turn right and proceed towards position 3

- Turn left and move towards position 4
- Repeat the above procedures as required.

! WARNING!

Do not work towards the cable.

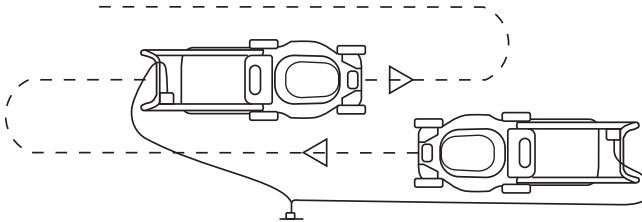

■ BLADE MAINTENANCE(FIG.5)

- Regularly remove grass and dirt from the blade.
- At the beginning of the gardening season, carefully examine the condition of the blade.
- If the blade is very blunt, sharpen or replace the blade.
- If the blade is damaged or worn, fit a new blade.

! WARNING!

 
Observe the following precautions:

- Disconnect the mower from the mains and wait until the blade has stopped rotating before proceeding.
- Be careful not to cut yourself. Use heavy-duty gloves or a cloth to grip the blade.
- Only use the specified replacement blade.
- Do not remove the impeller (A) for any reason.

■ TO REPLACE THE BLADE:

- Turn the mower onto its side.
- Grip the blade(C) with one hand.
- Use the spanner supplied to loosen and remove the blade nut (B).

- Replace the blade
- Securely tighten the blade nut.

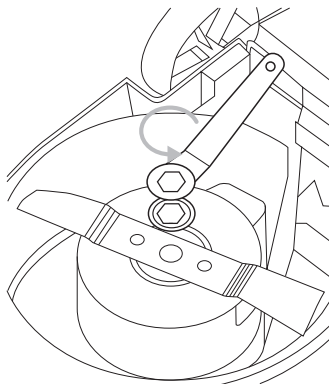

■ MAINTANCE

- Keep all nuts, bolts and screws tight to be sure the lawn mower is in a safe working condition.
- Check the catcher frequently for wear or deterioration.
- Replace worn or damaged parts for safety.
- Only use the replacement blade, blade bolt and impeller specified for this product.
- Be careful during adjustments of the lawn mower to prevent entrapment of the fingers between moving blade and fixed parts of the machine.
- Oil the wheel pins.
- Store the lawn mower in a dry place.



www.ronixtools.com