


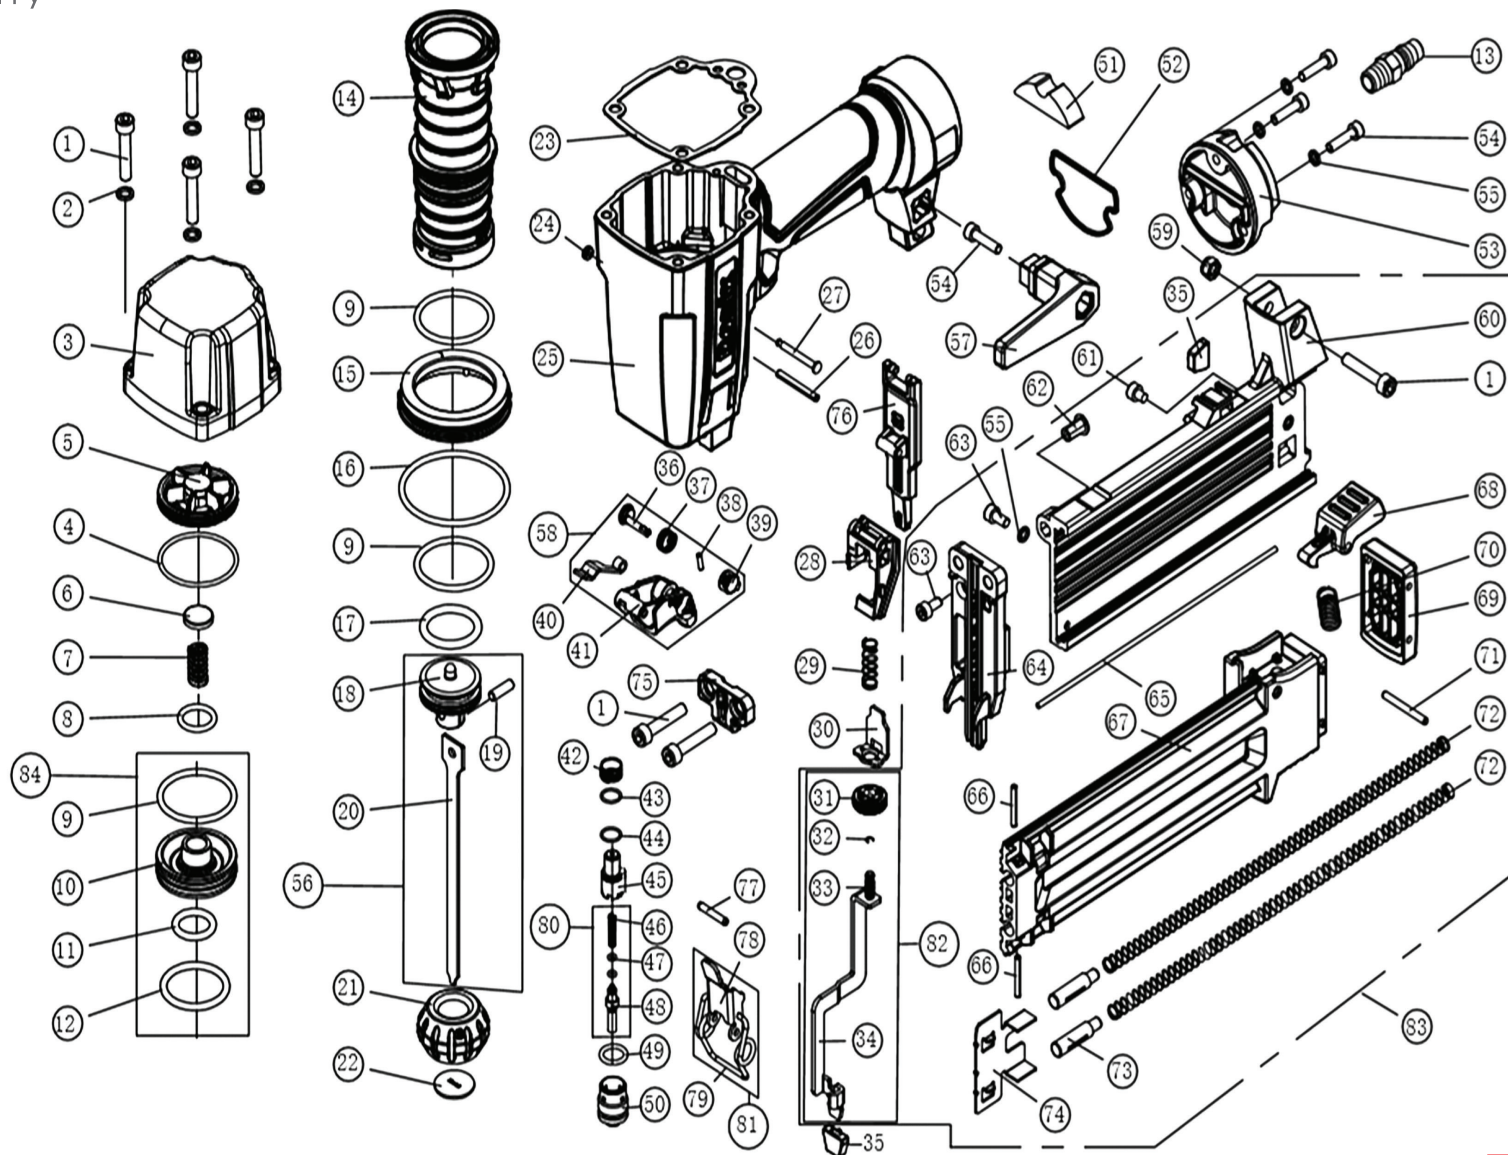

RA-1850
Brad Nailer

Number	Name
1	SCREW M5×25
2	WASHER #5
3	Cylinder CAP
4	O-RING 34.5X1.8
5	Trigger valve head
6	SEAL, AIR
7	FEEDER SPRING
8	O-RING 13.8x2.4
9	O-RING 32.5X2.65
10	FIRING VALVE PISTON
11	O-RING 14.8x3.1
12	O-RING 27.2x3.1
13	AIR PLUG
14	CYLINDER
15	SPACER
16	O-RING 50×2.65
17	O-RING 22.4*3.55
18	Piston head
19	PIN (4.2*13.5)
20	DRIVER BLADE
21	BUMPER
22	NOZZLE
23	GASKET
24	RING 5.5*2
25	Body
26	SPRING PIN 3X26
27	PIN
28	FLAKE
29	FEEDER SPRING
30	RELEASE CATCH B
31	Screw

Number	Name
32	RING
33	Screw
34	RELEASE CATCH
35	Handle GRIP
36	PIN
37	FEEDER SPRING
38	SPRING PIN 2X8
39	TRIGGER
40	RELEASING BLADE
41	TRIGGER
42	FEEDER SPRING
43	O-RING 11x1.05
44	O-RING 8x1
45	Upper Housing
46	CONICAL SPRING
47	O-RING 1.9*1.2
48	Remote Core
49	O-RING 11*1.9
50	Trigger Valve Guide
51	Silencer
52	GASKET
53	Tail Cover
54	SCREW M4×18
55	WASHER #4
56	PISTON SET
57	Belt Hook
58	TRIGGER SET
59	Nut M5
60	NAIL TANK
61	SCREW M4X6
62	M4 Nut

Number	Name
63	SCREW M4×8
64	DRIVER GUIDE
65	Steel Bar
66	PIN 2.5X14
67	UPPER MAG
68	CLICK LEVER
69	BUMPER
70	TORSION SPRING
71	SPRING PIN 3X28
72	FEEDER SPRING
73	Spring Holder
74	Pusher
75	SPACER
76	DRIVER GUIDE COVER
77	SPRING PIN 3X18
78	CLICK LEVER
79	RETAINER SPRING
80	TRIGGER VALVE SET
81	CLICK LEVER SET
82	CATCH RELEASE SET
83	MAGAZINE SET
84	HEAD VALVE PISTON SET
57	Belt Hook
58	TRIGGER SET
28	Motor
29	Tail cover bracket
30	Tail cover