



Number	Name
1	Top cover
2	Lens
3	Light cup
4	Left shell
5	Front decorative film
6	White light board
7	White light lamp-chimney
8	Back decorative film A
9	Battery
10	Bottom shell
11	No.3 bone bar
12	White light button
13	Belt buckle
14	Switch
15	PCBA of switch
16	Right shell
17	Front decorative film
18	Red light board
19	Red light lamp-chimney
20	Back decorative film B
21	Battery press
22	Control board
23	Button press
24	A beam of light
25	Red light button
26	Back cover
27	USB plug