


Ronix[®]

Premium Quality

LASER DISTANCE METER


RH-9100

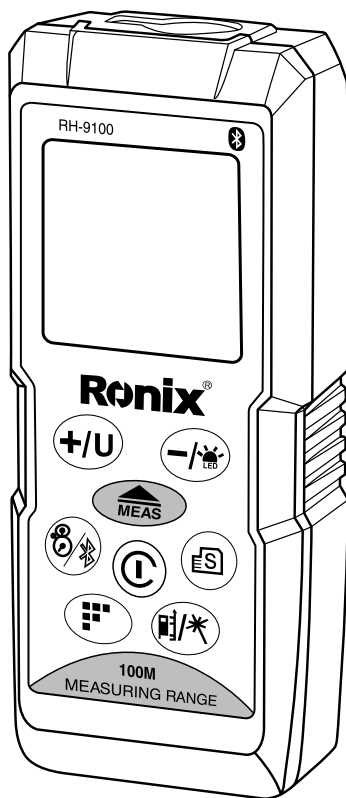

SPECIFICATION

Model	RH-9100
Laser Measure Range	0.2 to 100M
Accuracy	±1.5mm (±0.06 inch)
Protection Class	IP54 (Dust/Water Proof)
Auto Laser Switch Off	30s
Auto Unit Switch Off	180s
Unit Dimensions (mm)	105x41x24 mm
Power Source	2 x AAA Batteries
Measuring Unit	m/in/ft/ft+in
Storage Temperature	-20°C to 60°C
Operating Temperature	-5°C to 40°C
Dimensions	113*47.5*30.2
Battery Life	10,000 Times
Angle Measuring Range	-180 to +180
Functions	Distance/Area/ Volume/Pythagorean/ Continuous Measurement/Add and Subtract/ Min&Max Reading/Timer Countdown/Stake out
Includes	AAA 3x1.5V, Textile Pouch

PART LIST

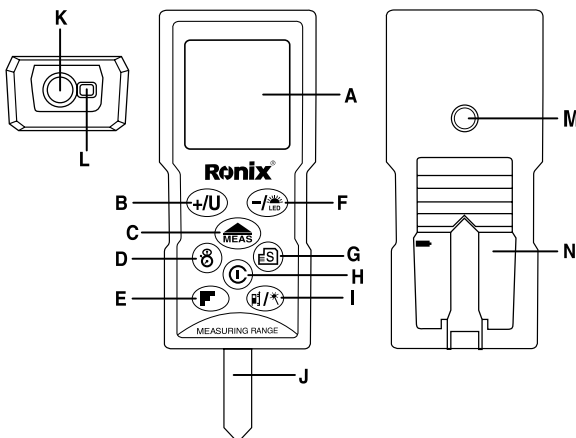

- A) LCD
- B) Additional /Unit
- C) Measure Key
- D) Timer /Bluetooth
- E) Functions (Area, Volume, Indirect measure I.II.III, Stake out setup)
- F) Subtraction /backlight
- G) Measurement records
- H) Clear /Power
- I) Reference /Laser point
- J) Pin tail
- K) Laser receiving window
- L) Laser emitted window
- M) Tripod Thread
- N) Battery cap

INSIDE THE BOX

- 1) Laser distance meter x 1
- 2) AAA Battery x 2
- 3) Operation manual x 1
- 4) Carrying case x 1
- 5) Safety strap x 1

SAFETY INFORMATION

- This is a Class 2 laser tool, laser radiation is emitted from this product and is manufactured to comply:
IEC 60825-1: 2007, EN 60825-1:2007, EN 61326-1:2013 and CRF21, parts 1040.10 and
- 1040.11.
- Use of controls, adjustment procedures other than those specified herein may result in laser radiation exposure.
- Never stare directly into beam or aim the laser beams at others.
- Product contains semiconductor laser diodes with wave length of

650 nanometers.

- The total continuous output of the beams never exceeds 1.0mW.
- Product complies with EMC Test according to EN61000-6-3:2001+A11:2004, EN61000-6-1:2001, EN61326-1:2013, IEC 61326:2012 and FCC Test according to PART 15.

BLUETOOTH SAFETY

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- This device may not cause interference,
- This device must accept any interference, including interference

that may cause undesired operation of the device.


Laser Radiation do not stare into beam.

 650 mm / Power<1mW Class II laser product EN 60825 1:2007



OVERVIEW FOR SCREEN

- 1) Laser indicator
- 2) Indirect measuring
- 3) Measuring function
- 4) Measuring reference
- 5) Add and Subtract
- 6) Maximum display
- 7) Minimum display
- 8) Staked direction indicator
- 9) Main Screen and units
- 10) Countdown measuring
- 11) Memories
- 12) Battery status
- 13) Sub Screen and units




BATTERY INSTALLATION AND POWER STATUS

- 1) This unit is powered by 2 x AAA batteries.
- 2) Remove battery lid and observing correct polarity before install batteries.
- 3) Battery level is showed on screen with battery icon one screen. 

■ BATTERY LIFE INDICATOR SYMBOLS

- 1) When the icon  appears ,there are approximately 1000 times to measures.
- 2) Replace batteries when low battery icon  flash on screen.
- 3) To change new batteries, when install new batteries, then close back lid.

SWITCH ON/OFF

- 1) Be sure to check battery status before start.
- 2) Click the  or  to turn on the device. The device will process the initial procedure and get ready to measure by turn on the laser dot.
- 3) Tap and hold  for 3 seconds to turn off.


NOTE:

The device will turn off automatically after 180 seconds (3 minutes).





MEASURING STARTING POINTS

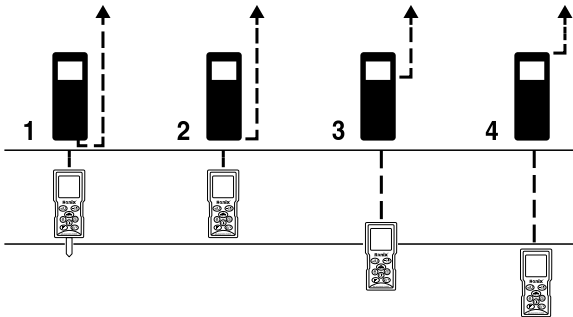On the body of this device, 4 points were designed in order to send laser beam.


- 1) Spike (Pin tail)
- 2) Back of the unit
- 3) Tripod thread
- 4) Front of the unit



STORE MEASUREMENT TO MEMORY AND LOOKUP


- When you want to add the measurements on the screen, press  to add to memory. You could find the location in memory on the top of screen.
- To lookup stored measurements, press and hold  to enter the lookup mode.
- Press  to move the index up and Press  to move index

down.

- To clear all stored measurements, press and hold  again in lookup mode to clear all memory.



GLOBAL UNITS CONVERTOR

■ UNIT SETTING

- 1) There are 8 units inside the laser distance meter.
- 2) Click and hold  to select preferred unit.
- 3) Unit Switch Reference.

	Meter	Feet	Inch	0'0"1/32	Inch	Inch	Inch	尺
Length	m	ft.	in	0'0"1/32	1/32in	1/16in	1/8in	10/33
Area	m ²	ft ²	ft ²	ft ²	ft ²	ft ²	ft ²	P
Volume	m ³	ft ³	ft ³	ft ³	ft ³	ft ³	ft ³	m ²

BACKLIGHT & LASER POINTER MODE



Click and hold  to turn on or off the backlight. To enable laser pointer mode, click and hold . The laser indicator will display continuously until the mode is turned off.





STAKE-OUT MEASUREMENT

Stake out measurement help users to split a long distance into several pieces equally.


The function needs to be used in Continuous Measurement Mode with preset distance.

SETUP STAKE-OUT DISTANCE



- 1) Click  six times to enter setup of stake-out distance.
- 2) Click  to increase the value.

- 3) Click  to decrease your value.
- 4) Click  to shift between numbers.
- 5) Click  to save the value and exit the setup mode.
- 6) Click  to restore zero.

■ USE OF STAKE-OUT WITH PRESET DISTANCE



- 1) Enable “Continuous Mode” by tap and hold .
- 2) Forward and backward arrow will be showed next to the measurements.
- 3) Follow the arrow to desired distance, device beeps to notify you when reach the preset distance and its multiplies.

COUNTDOWN MEASURE


- 1) For a more stable measurement or you could use countdown measure function to trigger measuring in setting times.
- 2) Click  to set your preferred self-trigger time.
- 3) Timer could set from 3 seconds to 15 seconds.
- 4) After the time is set, press to  activate measuring.
- 5) After a beep, the measured result appears on main screen.

MEASURING FUNCTIONS



■ SINGLE MEASUREMENT MODE

- 1) Move the laser dot onto the target.
- 2) Keep your position stable and click .
- 3) The measurement will be displayed on LCD screen and laser will be turn off.
- 4) Click  again to enable the laser dot for next measurement.


■ CONTINUOUS MEASUREMENT MODE

- 1) Continuous measurement is also called tracking measurement and is recommend to use for seeking proper distance.
- 2) Move the laser dot onto the target.
- 3) Keep your position stable and tap and hold , the laser dis-





tance meter will enter continuous measurement mode.

- 4) Move the device back and forward to proper distance.
- 5) Click  to pause the measurement .
- 6) Click  again to leave the continuously measurement mode.


MEASUREMENT REFERENCE

- 1) There are four reference positions for measurement. They are back of the unit, front of the unit, tripod thread and the spike.
- 2) Click  to select the proper position.


■ MEASUREMENT ADDITION & SUBTRACTION

- 1) To make summary or difference between two measurements is easy.
- 2) Finish your first measurement, then click  to save as Addend or  to save as Minuend.
- 3) Take the second measurement, then click  to add from addend or  to subtract minuend.

■ AREA MEASUREMENT


- 1) Click  to enable Area measurement.
- 2) Laser will be activated when entering area measurement mode.
- 3) Follow the instructions on main screen to measure WIDTH and LENGTH.
- 4) After finish all the instructions, the result [AREA] will be showed on screen.


■ VOLUME MEASUREMENT


- 1) Click  twice to enable Volume measurement.
- 2) Laser will be activated when entering volume measurement mode.
- 3) Follow the instructions on main screen to measure WIDTH, LENGTH and HEIGHT.
- 4) After finish all the instructions, the result [VOLUME] will be showed on screen.


■ INDIRECTLY HEIGHT I, II & III MEASUREMENT (BASE ON

PYTHAGOREAN)

- 1) Click  thrice, four and five times to enable Indirectly Measurement.
- 2) Laser will be activated when entering indirectly measurement mode.
- 3) Follow the instructions on main screen to measure the LENGTH OF HYPOTENUSE(S) and BASE.
- 4) After finish all the instructions, the result [HEIGHT] will be showed on screen.

 Indirect measure I

 Indirect measure II

 Indirect measure III

ERROR CODE

Code	Description	Solution
Error 01	Out of measuring range	Measuring in a proper range
Error 02	Reflected signal is too weak	Select a better surface
Error 03	Out of display range (Max Value: 99999), e.g.: result of area or dimension is out of display range	Divide calculation into intermediate steps
Error 04	Pythagorean calculation error	Check and verify values and steps are correct
Error 06	Out of working temperature	Measure in an environment within specified working temperature
Error 07	Ambient light is too strong	Measure in a darker place (Shadow target)

CARE & RECYCLING

- Cleansing
- Clean the device with a damp, soft cloth.
- Never immerse the device in water.
- Never use aggressive cleaning agents or solvents.

■ RECYCLING

Batteries must not be disposed of with household waste. Care for the environment and take them to the collection points provided in accordance with national or local regulations. The product must not be disposed with household waste.

Ronix[®]

Premium Quality