


**Ronix**<sup>®</sup>  
Premium Quality

**ELEKTRISCHE HEISLUFTPISTOLE  
1102**

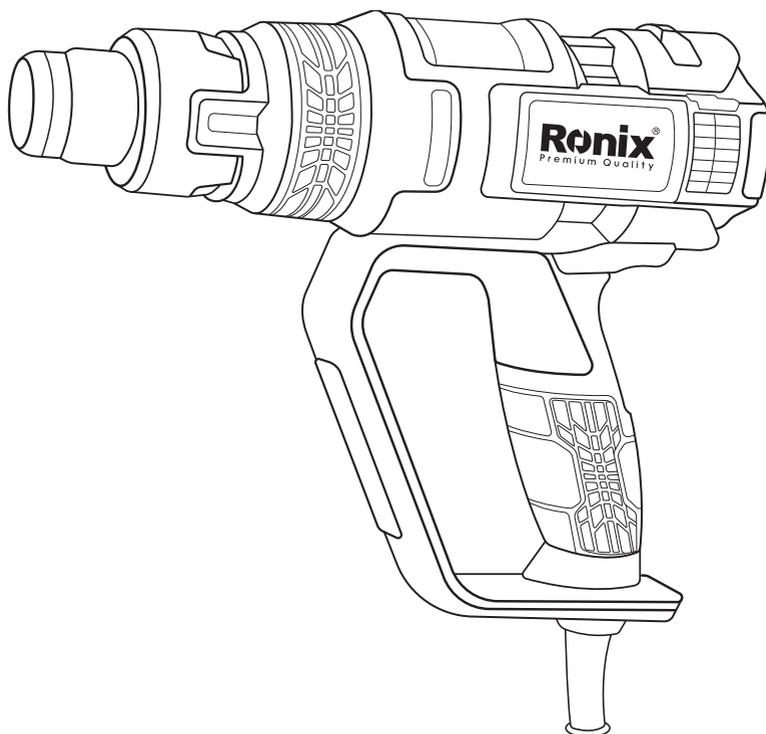


[www.ronixtools.com](http://www.ronixtools.com)



## SPEZIFIKATIONEN

Modell	<b>1102</b>
Leistung	2000W
Spannung	220-240V
Frequenz	50-60Hz
Luftvolumen & Temperaturen	1: 250 L/min 50°C 2: 250 L/min 50-600°C 3: 500 L/min 50-600°C
Gewicht	1Kg
Enthält	3 Düsen, Schabewerkzeug

## WERKZEUGTEILE

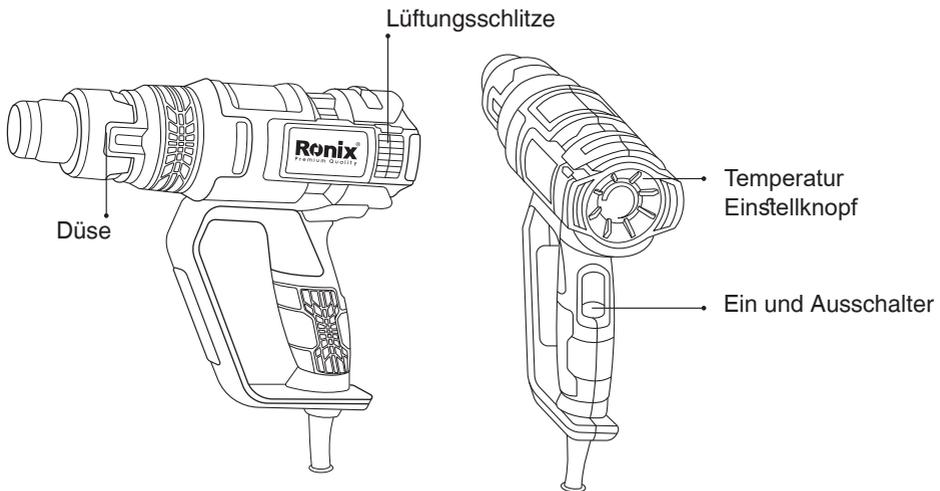



## **HINWEIS:**

Ihr Heißluftpistole wurde zum Entfernen von Farbe, Löten von Rohren, Schrumpfen von PVC, Schweißen und Biegen von Kunststoff sowie zum allgemeinen Trocknen und Auftauen entwickelt.

## **ALLGEMEINE SICHERHEITSHINWEISE FÜR ELEKTROWERKZEUGE**

Lesen Sie alle Sicherheitswarnungen und Anweisungen. Das Nichtbeachten der Warnungen und Anweisungen kann zu elektrischem Schlag, Feuer und/oder schweren Verletzungen führen. Bewahren Sie alle Warnungen und Anweisungen für die Zukunft auf. Der Begriff "Elektrowerkzeug" in den Warnungen bezieht sich auf Ihr netzbetriebenes (mit Kabel) oder akkubetriebenes (kabelloses) Elektrowerkzeug.

### **ARBEITSBEREICH**

- Halten Sie den Arbeitsbereich sauber und gut beleuchtet. Unordnung und dunkle Bereiche laden zu Unfällen ein.
- Betreiben Sie Elektrowerkzeuge nicht in explosiven Atmosphären, wie in Gegenwart von brennbaren Flüssigkeiten, Gasen oder Staub. Elektrowerkzeuge erzeugen Funken, die den Staub oder die Dämpfe entzünden können.
- Halten Sie Kinder und Umstehende fern, während Sie ein Elektrowerkzeug bedienen. Ablenkungen können dazu führen, dass Sie die Kontrolle verlieren.

### **ELEKTRISCHE SICHERHEIT**

- Die Stecker des Elektrowerkzeugs müssen zur Steckdose passen. Verändern Sie den Stecker niemals in irgendeiner Weise. Verwenden Sie keine Adapterstecker mit geerdeten Elektrowerkzeugen. Unveränderte Stecker und passende Steckdosen verringern das Risiko eines elektrischen Schlages.
- Vermeiden Sie Körperkontakt mit geerdeten Oberflächen wie Rohren,

Heizkörpern, Herden und Kühlschränken. Es besteht ein erhöhtes Risiko eines elektrischen Schlages, wenn Ihr Körper geerdet ist.

- Setzen Sie Elektrowerkzeuge nicht Regen oder nassen Bedingungen aus. Wasser, das in ein Elektrowerkzeug eindringt, erhöht das Risiko eines elektrischen Schlages.
- Missbrauchen Sie das Kabel nicht. Verwenden Sie das Kabel niemals zum Tragen, Ziehen oder Abziehen des Elektrowerkzeugs. Halten Sie das Kabel fern von Hitze, Öl, scharfen Kanten oder beweglichen Teilen. Beschädigte oder verwickelte Kabel erhöhen das Risiko eines elektrischen Schlages.
- Wenn Sie ein Elektrowerkzeug im Freien betreiben, verwenden Sie ein Verlängerungskabel, das für den Außeneinsatz geeignet ist. Die Verwendung eines für den Außeneinsatz geeigneten Kabels verringert das Risiko eines elektrischen Schlages.
- Wenn der Betrieb eines Elektrowerkzeugs an einem feuchten Ort unvermeidlich ist, verwenden Sie ein mit einem Fehlerstromschutzschalter (RCD) geschützte Stromversorgung. Die Verwendung eines RCD verringert das Risiko eines elektrischen Schlages.

## **PERSÖNLICHE SICHERHEIT**

- Bleiben Sie wachsam, achten Sie darauf, was Sie tun, und verwenden Sie den gesunden Menschenverstand beim Bedienen eines Elektrowerkzeugs. Verwenden Sie ein Elektrowerkzeug nicht, wenn Sie müde sind oder unter dem Einfluss von Drogen, Alkohol oder Medikamenten stehen. Ein Moment der Unachtsamkeit beim Bedienen von Elektrowerkzeugen kann zu schweren persönlichen Verletzungen führen.
- Verwenden Sie Schutzausrüstung. Tragen Sie immer Augenschutz. Schutzausrüstungen wie Staubmaske, rutschfeste Sicherheitsschuhe, Schutzhelm oder Gehörschutz, die immer dann verwendet werden, wenn die Bedingungen dies erfordern, verringern persönliche Verletzungen.
- Vermeiden Sie versehentliches Starten. Stellen Sie sicher, dass der Schalter vor dem Einstecken in der Aus-Position ist.
- Das Tragen von Elektrowerkzeugen mit dem Finger am Schalter oder

das Einstecken von Elektrowerkzeugen, die eingeschaltet sind, lädt zu Unfällen ein.

- Entfernen Sie vor dem Einschalten des Elektrowerkzeugs alle Einstellschlüssel oder Schraubenschlüssel. Ein am rotierenden Teil des Elektrowerkzeugs angebrachter Schlüssel oder Schraubenschlüssel kann zu persönlichen Verletzungen führen.
- Überdehnen Sie sich nicht. Halten Sie jederzeit einen ordnungsgemäßen Stand und Gleichgewicht. Dies ermöglicht eine bessere Kontrolle des Elektrowerkzeugs in unerwarteten Situationen.
- Kleiden Sie sich angemessen. Tragen Sie keine lockere Kleidung oder Schmuck. Halten Sie Ihre Haare, Kleidung und Handschuhe von beweglichen Teilen fern. Lockere Kleidung, Schmuck oder lange Haare können in beweglichen Teilen hängen bleiben.
- Wenn Vorrichtungen für den Anschluss von Staubabsaugungs- und Sammeleinrichtungen vorgesehen sind, stellen Sie sicher, dass diese angeschlossen und ordnungsgemäß verwendet werden. Die Verwendung dieser Geräte kann staubbedingte Gefahren verringern.

## **ZUSÄTZLICHE SICHERHEITSHINWEISE FÜR HEISSLUFTPISTOLEN**

- Halten Sie Ihre Hand nicht über die Lüftungsschlitze oder blockieren Sie diese in keiner Weise.
- Die Düse und das Zubehör dieses Werkzeugs werden während des Gebrauchs extrem heiß. Lassen Sie diese Teile abkühlen, bevor Sie sie berühren.
- Schalten Sie das Werkzeug immer aus, bevor Sie es ablegen.
- Lassen Sie das Werkzeug nicht unbeaufsichtigt, während es eingeschaltet ist.
- Es kann zu einem Brand kommen, wenn das Gerät nicht sorgfältig verwendet wird.
- Wärme kann auf brennbare Materialien übertragen werden, die nicht sichtbar sind. Verwenden Sie es nicht in feuchter Atmosphäre, in der brennbare Gase vorhanden sein können oder in der Nähe von

brennbaren Materialien.

- Lassen Sie das Werkzeug vollständig abkühlen, bevor Sie es verstauen.
- Sorgen Sie für ausreichende Belüftung, da giftige Dämpfe entstehen können.
- Verwenden Sie es nicht als Haartrockner.
- Blockieren Sie weder die Lufteinlass noch die Düsenauslass, da dies zu einer übermäßigen Wärmeentwicklung führen kann, die das Werkzeug beschädigt.
- Richten Sie den heißen Luftstrom nicht auf andere Personen.
- Berühren Sie die Metall Düse nicht, da sie während des Gebrauchs sehr heiß wird und bis zu 30 Minuten nach Gebrauch heiß bleibt.
- Stellen Sie die Düse während des Gebrauchs oder unmittelbar danach nicht gegen irgendetwas.
- Stecken Sie nichts in die Düse, da dies zu einem elektrischen Schlag führen könnte. Schauen Sie nicht in die Düse, während das Gerät in Betrieb ist, aufgrund der hohen erzeugten Temperatur.
- Lassen Sie keine Farbe an der Düse oder am Schaber haften, da diese nach einiger Zeit entzünden könnte.

## **FARBE ENTFERNEN**

- Verwenden Sie dieses Werkzeug nicht, um Farbe zu entfernen, die Blei enthält. Die Schälungen, Rückstände und Dämpfe der Farbe können Blei enthalten, das giftig ist. Jedes Gebäude vor 1960 könnte in der Vergangenheit mit bleihaltiger Farbe gestrichen und mit zusätzlichen Farbschichten bedeckt worden sein.
- Einmal auf Oberflächen abgelagert, kann häufiger Handkontakt zur Aufnahme von Blei führen.
- Selbst die Exposition gegenüber niedrigen Bleikonzentrationen kann irreversible Schäden am Gehirn und Nervensystem verursachen. Junge und ungeborene Kinder sind besonders gefährdet.
- Stellen Sie beim Entfernen von Farbe sicher, dass der Arbeitsbereich abgeschlossen ist. Tragen Sie vorzugsweise eine Staubschutzmaske.
- Verbrennen Sie die Farbe nicht. Verwenden Sie den Schaber

(falls zutreffend) und halten Sie die Düse mindestens 25mm von der gestrichenen Oberfläche entfernt. Arbeiten Sie beim Arbeiten in vertikaler Richtung nach unten, um zu verhindern, dass Farbe in das Werkzeug fällt und verbrennt.

- Entsorgen Sie alle Farbreste sicher und stellen Sie sicher, dass der Arbeitsbereich nach Abschluss der Arbeiten gründlich gereinigt wird.

## **SCHLÜSSELEINSTELLUNG**

### **POSITION 1**

- Abkühlen der heißen Teile
- Abkühlen der Maschinen vor dem Düsenwechsel.

### **POSITION 2**

- Trocknen von Farbe und Lack
- Entfernen von Aufklebern
- Wachsen und Entwachsen
- Trocknen von nassem Holz vor dem Füllen
- Schrumpfen von PVC-Umwicklungen und Isolierschläuchen
- Auftauen von gefrorenen Rohren

### **POSITION 3**

- Kunststoffe schweißen
- Biegen von Kunststoffrohren und -platten
- Lösen von verrosteten oder fest angezogenen Muttern und Schrauben
- Entfernen von Farbe und Lack
- Lötten von Sanitärverbindungen



### **HINWEIS:**

Wenn Sie sich nicht sicher über die richtige Einstellung sind, beginnen Sie mit einer niedrigen Temperatureinstellung und erhöhen Sie die Temperatur schrittweise, bis Sie optimale Ergebnisse erzielen.

## MONTAGE DES RICHTIGEN ZUBEHÖRS


Icon	Beschreibung	Zweck
	Düse zum Schutz von Glas	Schutz von Fenstern beim Abbeizen von Rahmen
	Fischschwanzdüse	Trocknen, Auftauen Wärme wird über einen größeren Bereich verteilt
	Schaber	Abbeizen von Farbe und Lack
	Konzentrierdüse	Zum Entfärben von Nähten, Kanten, Ecken, Rissen und Gips-Pilastern / Kantenanleimen in der gesamten Holzschnitzindustrie und MDF (für PVC-Bänder und Melamin)

### **HINWEIS:**

- Stellen Sie sicher, dass das Werkzeug ausgeschaltet ist und die Düse abgekühlt ist.
- Eine herunterfallende Düse kann ein Objekt in Brand setzen. Düsen müssen fest und sicher am Gerät montiert werden.
- Eine heiße Düse zu berühren, kann zu schweren Verbrennungen führen. Lassen Sie das Gerät vor dem Anbringen oder Austauschen einer Düse vollständig abkühlen oder verwenden Sie ein geeignetes Werkzeug.
- Eine heiße Düse kann eine Oberfläche in Brand setzen. Legen Sie heiße Düsen nur auf feuerfeste Oberflächen.
- Eine falsche oder defekte Düse kann zu Wärmestau und Beschädigung des Geräts führen. Verwenden Sie nur Originaldüsen gemäß der Tabelle, die für Ihr Gerät geeignet sind.

**Ronix**<sup>®</sup>  
Premium Quality

**ELECTRIC HEAT GUN**  
**1102**

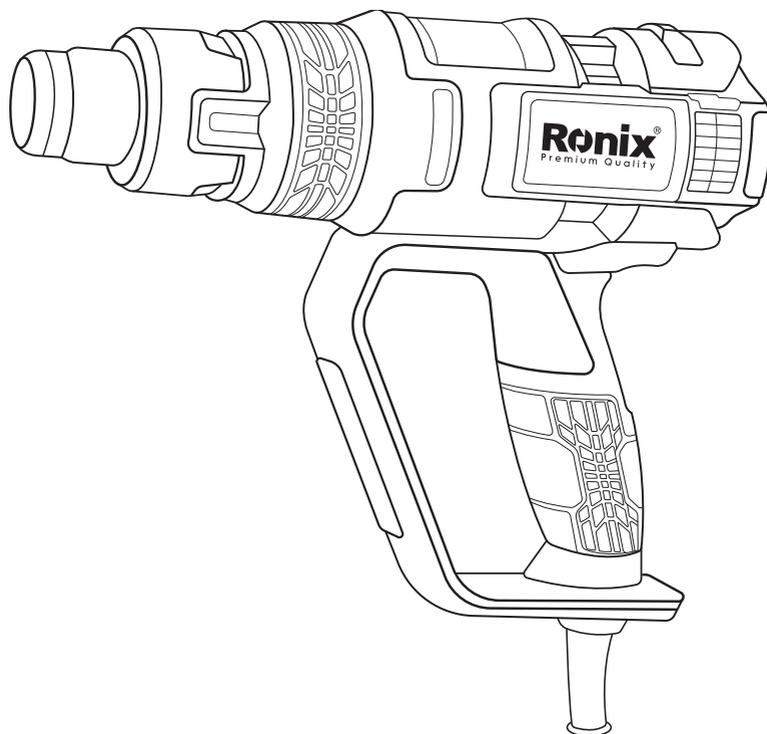


## SPECIFICATIONS

Model	<b>1102</b>
Power	2000W
Voltage	220-240V
Frequency	50-60Hz
Air Volume & Temperature	1: 250 L/min 50°C 2: 250 L/min 50-600°C 3: 500 L/min 50-600°C
Weight	1Kg
Includes	3 Nozzles, Scraper tool

### **! WARNING!**

Read this manual and general safety Instructions carefully before using the appliance, for your own safety. Your power tool should only be passed on together with these instructions.

## PART LIST

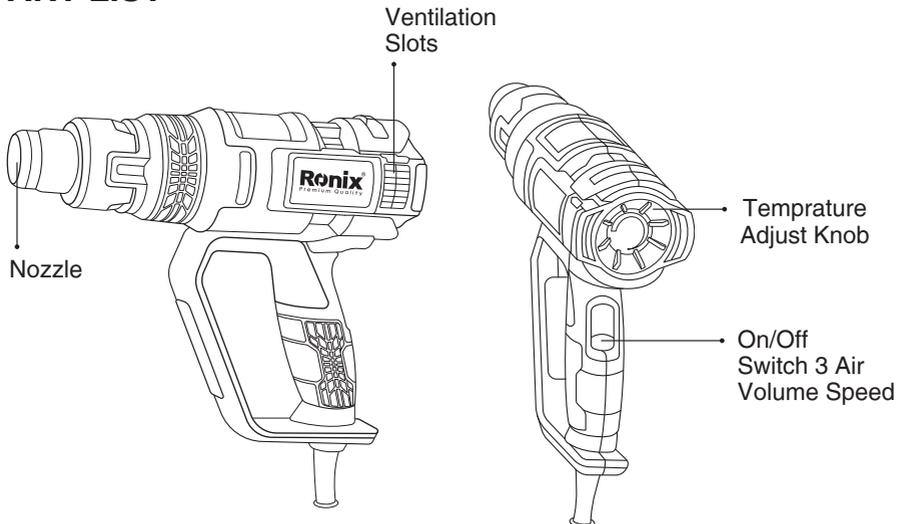

### **! NOTE:**

Your heat gun has been designed for stripping paint, soldering pipes,

shrinking PVC, welding and bending plastic as well as general drying and thawing purposes.

## **GENERAL POWER TOOL SAFETY WARNINGS**

Read all safety warnings and all instructions. Failure to follow all warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. The term “power tool” in the warnings refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

### **WORK AREA**

- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

### **ELECTRICAL SAFETY**

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable

for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

- If operating a power tool on a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

## **PERSONAL SAFETY**

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hand hat, or hearing protection used whenever conditions require will reduce personal injuries.

- Avoid accidental starting. Ensure the switch is in the off position before plugging in.

- Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.

- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

- Dress properly. Do not wear loose clothing or jeweler. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jeweler or long hair can be caught in moving parts.

- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust related hazards.

## **POWER TOOL USE AND CARE**

- Do not force the power tool. Use the correct power tool for your

application. The correct power tool will do the job better and safer at the rate of which it was designed.

- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tool out of the reach children and do not allow persons unfamiliar with the power tool of these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or sticking of moving parts, breakage of parts and other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with cutting edges are less likely to stick and are easier to control.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could lead to a hazardous situation.

## **SERVICE**

Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

## **ADDITIONAL SAFETY INSTRUCTIONS FOR HEAT GUNS**

- Do not place your hand over the air vents or block the vents in any way.
- The nozzle and accessories of this tool become extremely hot during use. Let these parts cool down before touching.
- Always switch the tool off before putting it down.

- Do not leave the tool unattended while it is switched on.
- A fire may arise if the appliance is not used with care.
- Heat may be conducted to combustible materials that are out of sight. Do not use in a damp atmosphere, where flammable gases may be present or near combustible materials.
- Allow the tool to cool fully before storing.
- Ensure adequate ventilation as toxic fumes may be produced.
- Do not use as a hairdryer.
- Do not obstruct either the air intake or nozzle outlet, as this may cause excessive heat buildup resulting in damage to the tool.
- Do not direct the hot air blast at other people.
- Do not touch the metal nozzle as it becomes very hot during use and remains hot for up to 30 minutes after use.
- Do not place the nozzle against anything while using or immediately after use.
- Do not poke anything down the nozzle as it could give you an electric shock. Do not look down the nozzle while the unit is working because of the high temperature being produced.
- Do not allow paint to adhere to the nozzle or scraper as it could ignite after some time.

## **REMOVING PAINT**

- Do not use this tool to remove paint containing lead. The peelings, residue and vapors of paint may contain lead, which is poisonous. Any pre-1960 building may have been painted in the past with paint containing lead and covered with additional layers of paint.
- Once deposited on surfaces, hand to much contact can result in the ingestion of lead.
- Exposure even to low levels of lead can cause irreversible damage to the brain and nervous system. Young and unborn children are particularly vulnerable.
- When removing paint., ensue that the work area is enclosed. Preferably wear a dust mask.

- Do not burn the paint. Use the scraper (if applicable) and keep the nozzle at least 25 mm away from the painted surface. When working in a vertical direction, work downwards to prevent paint from falling into the tool and burning.
- Dispose of all paint debris safely and ensure that the work area is thoroughly cleaned after completing the work.

## **KEYS ADJUSTMENT**

### **POSITION 1**

- cooling the hot parts
- cooling the machines before changing the nozzle.

### **POSITION 2**

- Drying paint and varnish
- Removing stickers
- Waxing and de-waxing
- Drying wet timber prior to filling
- Shrinking PVC wrapping and insulation tubes
- Thawing frozen pipes

### **POSITION 3**

- Welding plastics
- Bending plastic pipes and sheets
- Loosening rusted or tightly fastened nuts and bolts
- Removing paint and lacquer
- Soldering plumbing joints



### **NOTE:**

If you are not sure about the correct setting, start with a low temperature setting and gradually increase the temperature until you achieve optimum results.

## MOUNTING THE CORRECT ACCESSORY

Icon	Description	Purpose
	Glass protection nozzle	Protection windows when stripping frames
	Fish tail surface nozzle	Drying, thawing (heat spread over wider area)
	Scraper	Stripping paint and varnish
	Concentrating nozzle	For decolorization of the seams, edges, corners, cracks and plaster pilasters / Edge banding in all woodcarving industry and MDF (for PVC tapes and melamine)

### **NOTE:**

Make sure that the tool is switched off and the nozzle has cooled down.

- Falling down nozzle can set an object on fire. Nozzles must be mounted firmly and secure on the unit.
- Touching a hot nozzle can lead to serious burns. Before attaching or replacing a nozzle, allow the unit to cool down completely or use a suitable tool.
- A hot nozzle can set a surface on fire. Place down hot nozzles only on fire proof surfaces.
- An incorrect or defective nozzle can lead to heat accumulation and damage the unit. Use only original nozzles according to the table that are suitable for your unit.

## INSTRUCTIONS FOR USE

- Always observe the safety instructions and applicable regulations.
- Use only one hand to hold the tool, do not place your other hand over the air vents
- Prior to operation: Mount the correct accessory for the application.
- Set the desired air temperature.
- Switching On and Off
- To switch the tool on, set the on/off switch to position 1/2/3. Some smoke

may be emitted after switching on; this does not indicate a problem.

- To switch the tool off, adjust the lowest temperature to cool off, then set the on/off switch to position 0. Let the tool cool down before moving or storing it.
- Temperature setting.
- Turn ON/OFF switch to 1/2/3, depending on temperature you need. The heat gun will start to buzz. Now you can increase or decrease the outlet temperature gradually by turning the adjust knob.
- Turn anti-clock wise to decrease, clock wise to increase the temperature.
- More LED lights turn on when temperature increases.
- Stripping paint
- Mount an appropriate accessory.
- Set a high air temperature.
- Switch the tool on.
- Direct the hot air onto the paint to be removed.
- When the paint softens, scrape the paint away using a hand scraper.

 **NOTE:**

Do not strip metal window frames, as the heat may be conducted onto the glass and crack it. When stripping other window frames, use the glass protection nozzle.

 **NOTE:**

Do not keep the tool directed at one spot too long to prevent igniting the surface.

 **NOTE:**

Avoid collecting paint on the scraper accessory, as it may ignite. If necessary, carefully remove paint debris from the scraper accessory using a knife.

## **STATIONARY USE**

This tool can also be used in stationary mode.

- Place the tool onto the workbench.

- Secure the cable to prevent pulling the tool off the workbench.
- Carefully switch the tool on.

**! NOTE:**

Make sure that the nozzle always points away from you and any bystanders.

- Make sure not to drop anything into the nozzle.

## **COOLING DOWN**

- The nozzle and accessory become very hot during use. Let them cool down before attempting to move or store the tool.
- To reduce the cooling time, switch the tool on at the lowest air temperature setting and let run for a few minutes.
- Switch the tool off and let it cool down for at least 30 minutes.

## **MAINTENANCE**

- Your Power Tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool care and regular cleaning.

## **LUBRICATION**

- Your power tool requires no additional lubrication.

## **CLEANING**

- Keep the ventilation slots of the machine clean to prevent overheating of the engine.
- Regularly clean the machine housing with a soft cloth, preferably after each use.
- Keep the ventilation slots free from dust and dirt.
- If the dirt does not come off use a soft cloth moistened with soapy water.

**! NOTE:**

Never use solvents such as petrol, alcohol, ammonia water, etc. These solvents may damage the plastic parts.



[www.ronixtools.com](http://www.ronixtools.com)